760 - 830 nm

830 - 920 nm

920 - 1100 nm

1100 - 1300 nm

1300 - 1450 nm

1450 - 1650 nm

1650 - 1850 nm

1850 - 1900 nm

1900 - 2200 nm

2200 - 2600 nm

2600 - 2900 nm

2900 - 4000 nm

4000 - 4600 nm

4600 - 5300 nm

6000 - 14000 nm



device protected by US patent 6.671.306 US patent 6.846.689 EU patent EP0984535

D-97218 Gerbrunn

# DFB laser diodes from 920 nm to 1100 nm




#### nanoplus single mode laser diodes

nanoplus is the only manufacturer world-wide routinely providing single and multi mode lasers at any wavelength from 760 to 6000 nm. At wavelengths up to 14  $\mu$ m, QCLs complete nanoplus' laser portfolio. Our patented distributed feedback laser diodes deliver single mode emission with well defined optical properties enabling a wide range of applications.

nanoplus lasers operate reliably in tens of thousands of installations worldwide, including chemical and metallurgical industries, gas pipelines, power plants, medical systems, airborne and satellite applications.

#### key features

- √ very high spectral purity
- √ narrow linewidth typically < 3 MHz
  </p>
- √ excellent reliability
- √ wide variety of packaging options
- ✓ customer-specific designs available

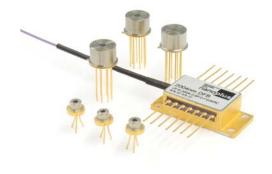

## application areas

- √ high performance gas sensing for process and environmental control
- √ precision metrology
- √ atomic clocks
- √ spectroscopy
- √ space technology

nanoplus lasers with excellent performance are specifically designed and characterized to fit your needs. This data sheet summarizes typical properties of nanoplus DFB lasers in the range from 920 nm to 1100 nm. Overleaf data for lasers used for injection seeding of Nd:YAG lasers is given as an example. These lasers have applications in e.g. remote sensing of wind speeds, profiling of atmospheric molecules and aerosols and topographic mapping.

general ratings (T = 25 °C)	symbol	unit	typical
optical output power	P <sub>out</sub>	mW	20
typical maximum operating voltage	$V_{op}$	V	2
forward current	I <sub>f</sub>	mA	50
side mode suppression ratio (SMSR)		dB	> 35

On request, lasers with specifically optimized properties, e.g. higher output power, are available.

### laser packaging options

TO5.6 header with or without cap

TO5 header with TEC and NTC

butterfly housing with SM or PM fiber

For dimensions and accessories, please see www.nanoplus.com

Further packaging options available on request.

ISO

9001

Nanosystems and Technologies GmbH Oberer Kirschberg 4 phone: +49 (0) 931 90827-0 fax: +49 (0) 931 90827-19 email: sales@nanoplus.com internet: www.nanoplus.com © copyright nanoplus GmbH 2017, all rights reserved. nanoplus GmbH reserves the right to modify these specifications at any time without notice and is not liable for errors.





# nanoplus DFB laser diodes at 1064 nm

A wide variety of gas molecules exhibit characteristic absorption lines in the near infrared. The wavelength of the main Nd:YAG laser transition is at 1064 nm.


The 1064 nm DFB laser diodes are used for injection seeding of Nd:YAG lasers, which have applications in remote sensing of wind speeds, profiling of atmospheric molecules and aerosols and topographical mapping. Applications of this type rely on Nd:YAG lasers, which are seeded with highly stable laterally and longitudinally single mode lasers. This data sheet reports performance data of nanoplus DFB lasers at this wavelength. Similar performance data are obtained in the entire wavelength range from 920 nm to 1100 nm. For examples of performance data of nanoplus lasers in other wavelength ranges, please see www.nanoplus.com or


contact sales@nanoplus.com

Fig. 1 Room temperature cw spectrum of a nanoplus DFB laser diode operating at 1064 nm

In many applications, temperature and/or current variations are used to adjust the laser emission precisely to the target wavelength.

Fig. 2 Mode hop free tuning of 1064 nm based DFBs by current variation at different temperatures

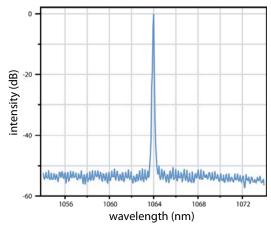

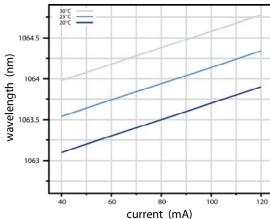

electrooptical characteristics (T = 25 °C)	symbol	unit	min	typ	max
peak wavelength	λ	nm	1063	1064	1065
threshold current	I <sub>th</sub>	mA	15	20	25
temperature tuning coefficient	$C_T$	nm / K	0.07	0.08	0.09
current tuning coefficient	Cı	nm/mA	0.01	0.02	0.025
slow axis (FWHM)		degrees	12	15	20
fast axis (FWHM)		degrees	35	40	45
emitting area	WxH	μт х μт	2.3 x 1.4	2.5 x 1.5	2.5 x 1.7
storage temperatures	$T_S$	°C	-40	20	80
operational temperature at case	T <sub>c</sub>	°C	-20	25	50

We will be happy to answer further questions. Please contact us at sales@nanoplus.com



phone: +49 (0) 931 90827-0 fax: +49 (0) 931 90827-19 email: sales@nanoplus.com internet: www.nanoplus.com



